


DW210

Warm Roof:

Upstand to concrete



Tel 01925 445532 Fax 01925 575096

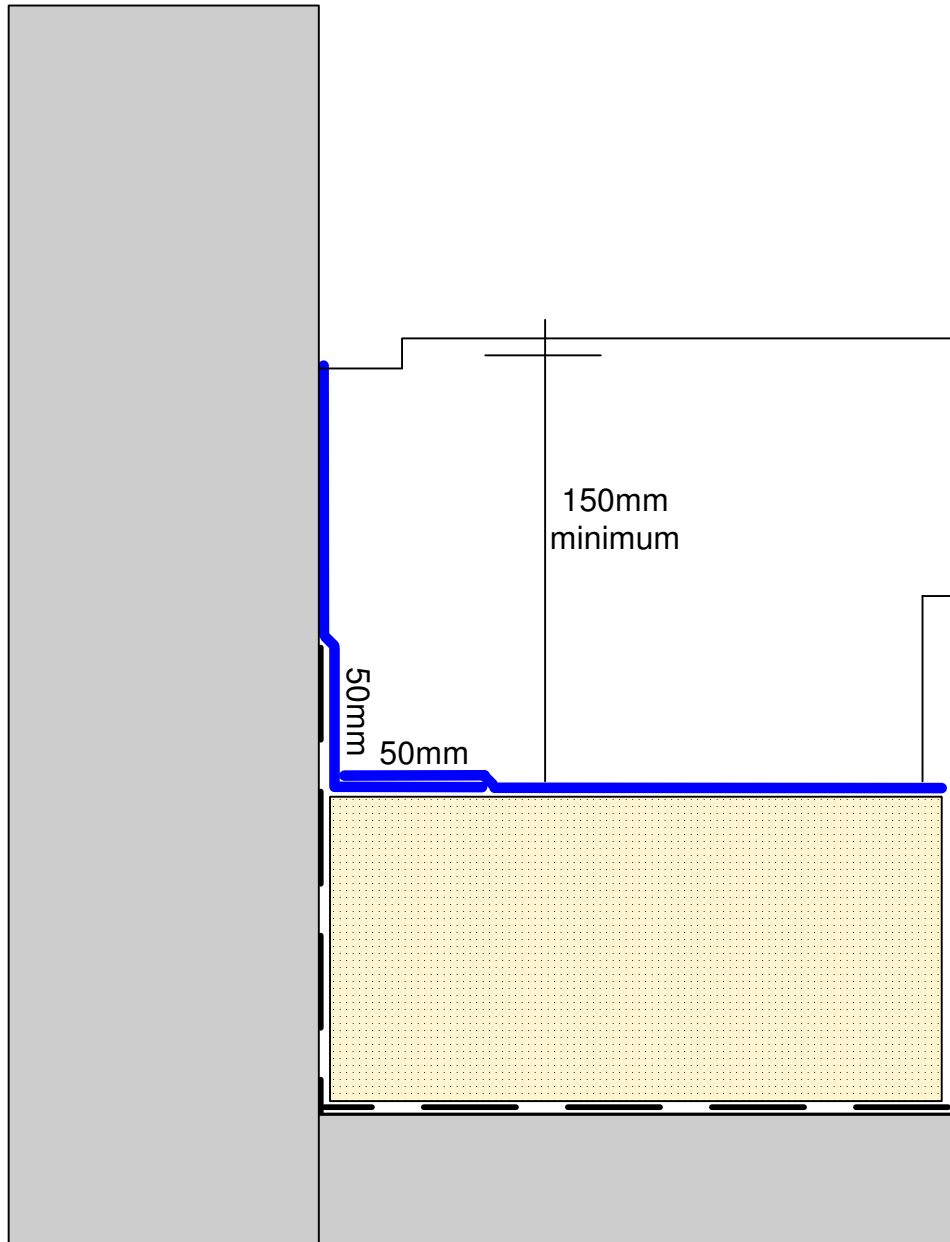

membrane finished to a masked line, fully bonded to concrete upstand

Kemperol membrane applied to prepared substrate

insulation

vapour control layer